



F/W Download Method

1. Open FactoryTool_HDCP/FactoryTool_HDCP.exe


2. Select language either English or Chinese

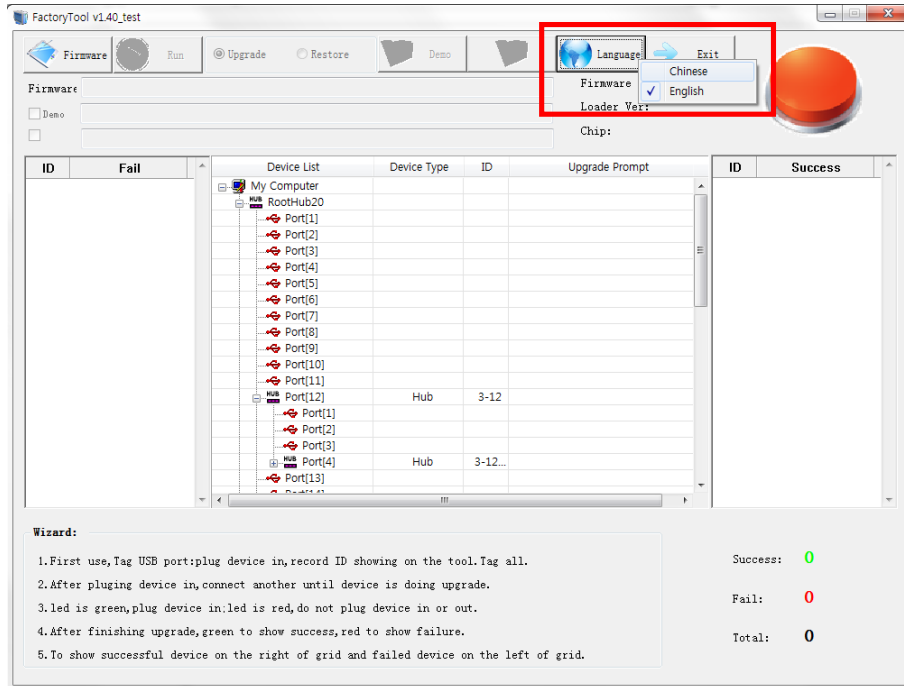


3. Click Firmware button

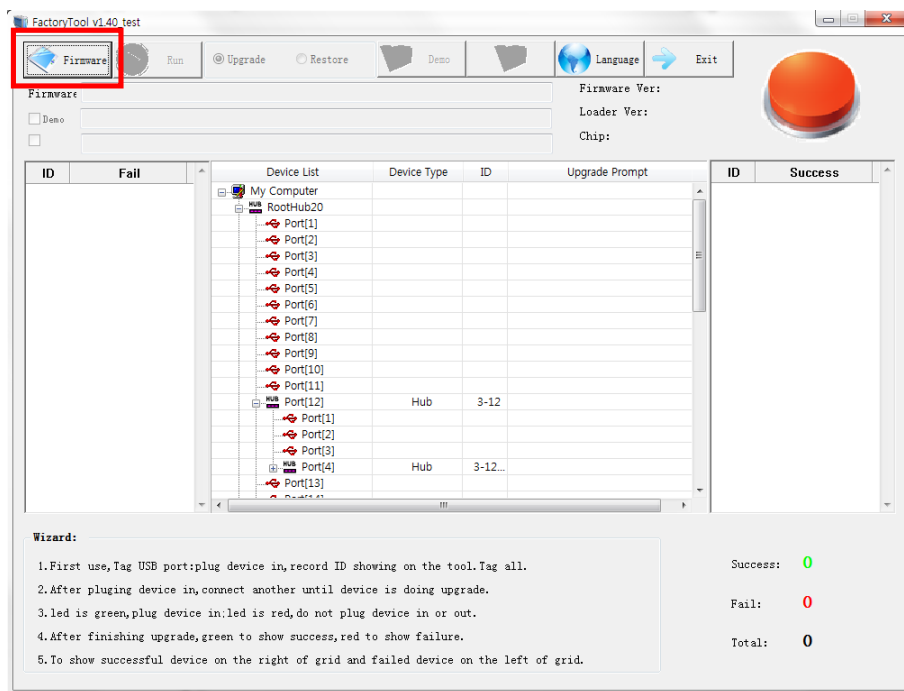

4. Select FactoryTool_HDCP/update.img

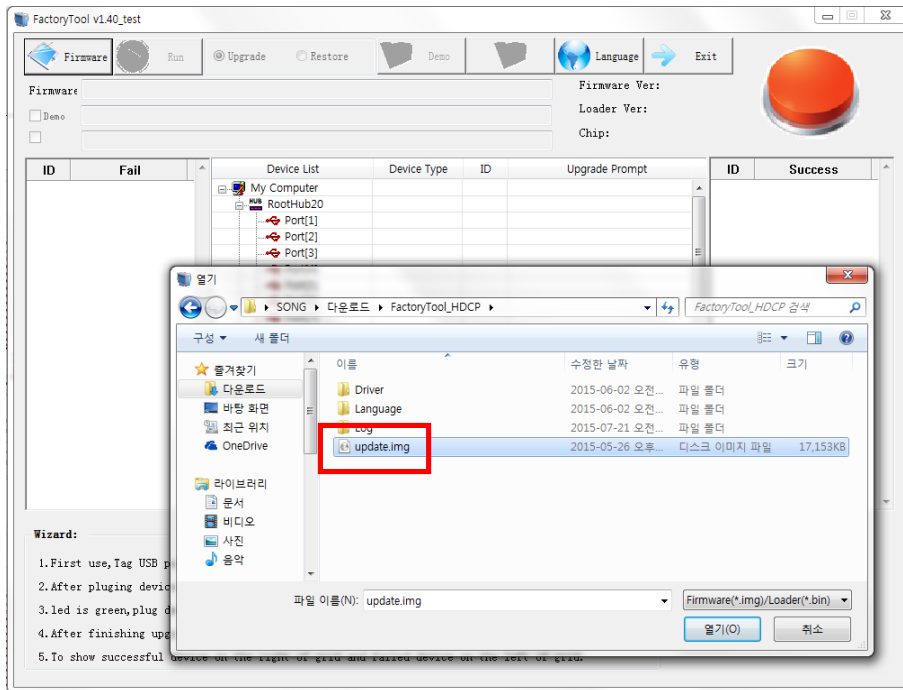

5. Click Run button

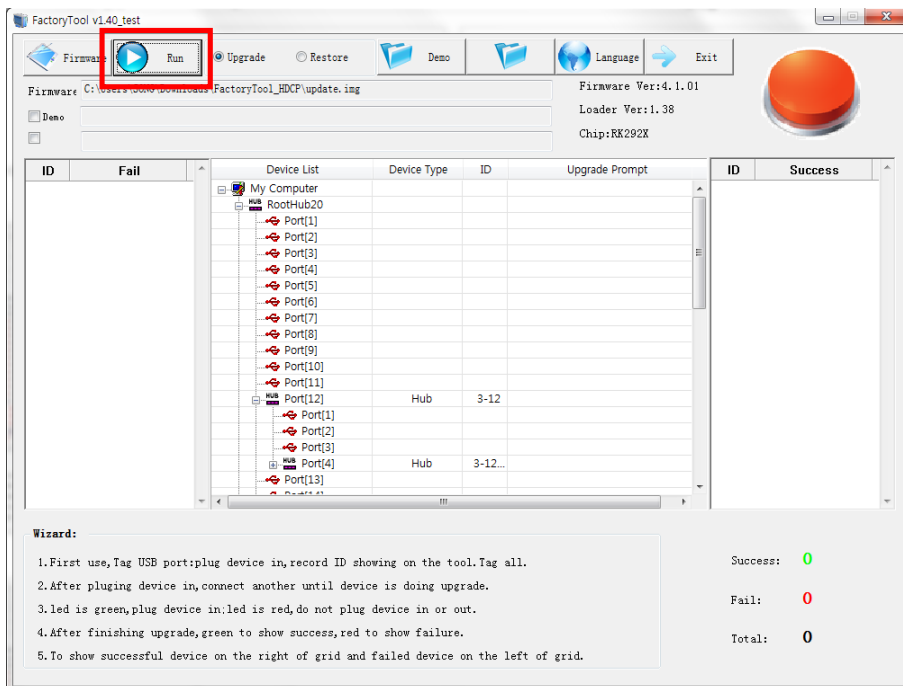


6. Connect Download Cable with SmartBeamLaser

6.1) Connect Micro USB with SmartBeamLaser


6.2) Connect USB with Computer



7. Click Reset and Power button at the same time

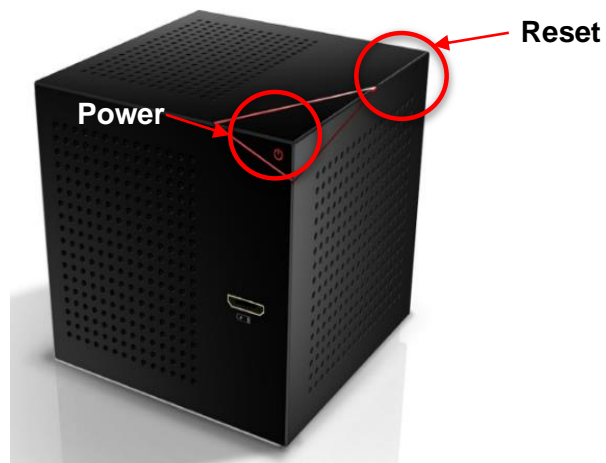

8. Download F/W

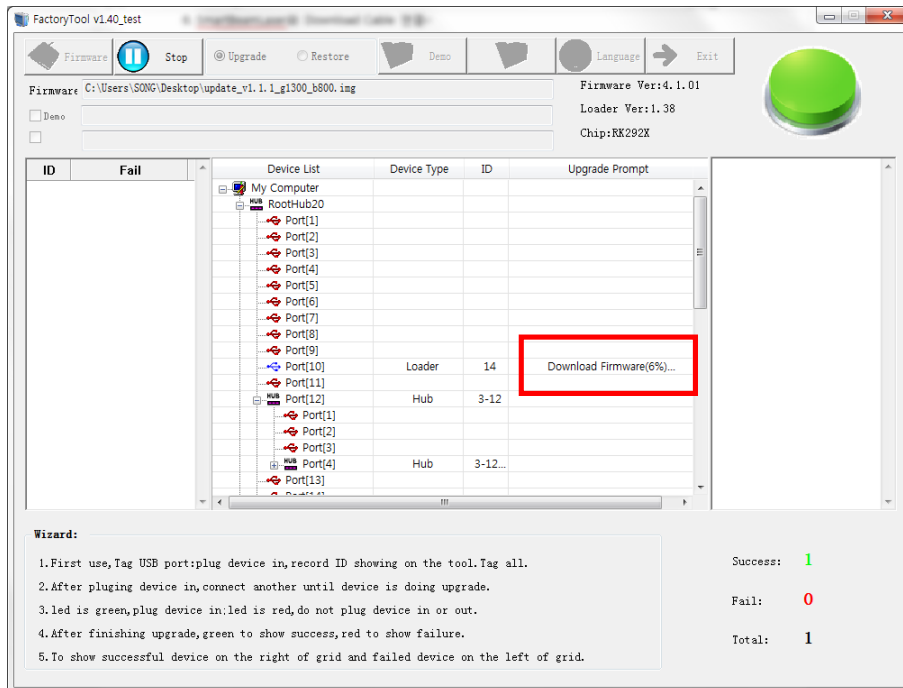

9. Automatically device will reboot.